Thinking of you

Electrolux

LAVAZZA A MODO MIO

ELM 5400

• EN •

EN Instruction book 3–13
Before using the appliance for the first time, please read the safety advice on page 4.

EN

Components

A. ON/OFF button
B. Espresso button
C. Espresso Lungo button
D. Cappuccino button
E. Latte Macchiato button
F. Lever
G. Capsule compartment
H. Water tank
I. Coffee spout
J. Cup support rack
K. Drip tray
L. Waste water indicator
M. Used capsules container
N. Power cord & plug
O. Motor unit
P. Lid
Q. Steam spout
R. Whisker
S. Removable whisking spiral
T. Milk glass
U. Motor release button

EN

Read the following instruction carefully before using machine for the first time.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance may only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate!
- Never use or pick up the appliance if
  – the supply cord is damaged,
  – the housing is damaged.
- The appliance must only be connected to an earthed socket. If necessary an extension cable suitable for 10 A can be used.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid hazard.
- Always place the appliance on a flat, level surface.
- Never leave the appliance unattended while connected to the supply mains.
- The appliance and accessories become hot during operation. Use only designated handles and knobs. Allow to cool down before cleaning or storage.
- The mains cable must not come into contact with any hot parts of the appliance.
- Do not immerse the appliance in water or any other liquid.
- Do not exceed the maximum filling volume as indicated on the appliances.
- Fill the water tank only with cold water, never with milk or other liquids.
- Do not use the appliance if the water tank has not been filled.
- Do not use the appliance without the drip tray or the drip grid.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- Do not carry machine by the handle.
- This machine can only be used with Lavazza A MODO MIO capsules. Do not put your fingers or any other object in the capsule compartment. The capsules can be used only once.
- The motor unit is not waterproof and cannot be immersed into the water.
- To avoid steam leakage during frothing, the frothing function shall be run with a capsule inserted.

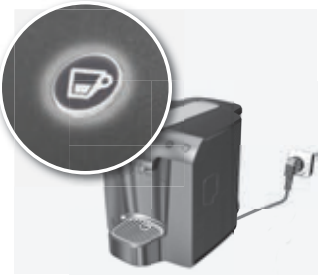

1. **Place the machine on a flat surface** and fill the tank with cold, drinkable and non sparkling water. ***(The machine must not be used with empty tank!)*** Plug the power cord into the mains and press the ON button. The machine is ready to use when the cup indicator lights stop flashing and become steady.

2. **When starting the machine for the first time:** Place a glass under the coffee spout and run the fresh water through the coffee spout by pressing the Espresso Lungo button. Run also the Latte Macchiato function one time by pressing the Latte Macchiato button with water in the milk glass.

3. **The machine must not be used with empty tank!** If no coffee is coming out during brewing try to prime it. To prime the circuit,run the Latte Macchiato function one time by pressing the Latte Macchiato button with water in the milk glass. Place a glass under the coffee spout and run also the fresh water through the coffee spout by pressing the Espresso Lungo button.

1. **Adjust the coffee spout height** for different cup sizes by either pulling it down or pushing it up.
   The machine is equipped with an energy saving function that automatically switches it off after 30 min of inactivity.

2. **A MODO MIO capsules.** Only suitable Lavazza "A MODO MIO" capsules should be placed in the capsule compartment. Single dose capsules brew a single coffee/product. DO NOT use the capsules more than once. Inserting 2 or more capsules can cause the machine to malfunction.

3. **Light.** The machine is equipped with a lamp which lights up the cup support rack. The light will be on during the brewing time and will switch off a few seconds after the cup is ready.

EN

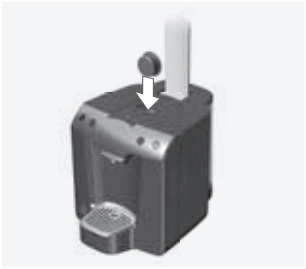

1. **Lift the lever, insert a capsule in the compartment.** Close the lever and press either Espresso or Espresso Lungo button. When the coffee is ready, lift the lever and the capsule falls down into the used capsules container.

2. **Programming coffee amount.** Place a cup on the cup support rack. Press and hold the Espresso or Espresso Lungo button. Release when desired coffee amount is reached. The programmed quantity is memorized by the machine.

EN

1. **Frothing milk for Cappuccino and Latte Macchiato:** Fill the glass of the milk frother with fresh milk (standard fridge temperature of 4-8 degrees) exactly to the level for the Cappuccino or Latte Macchiato line (do not exceed the line). Place the lid on top of the glass, plug the motor into the machine and then slide the glass under the motor. You can select hot and cold frothing.

2. **Warm frothing:** Press the Cappuccino or Latte Macchiato button, the amber light will start flashing. The frothing process will start in 30 sec. The process will stop automatically when the milk is prepared (you can stop it manually as well by pressing it again). Approximate time for warm frothing is 75 sec (Cappuccino) to 110 sec (Latte Macchiato).

3. **Cold frothing:** Press the Cappuccino or Latte Macchiato button for more than 2 sec. The LED light buttons will start flashing and turn blue and only the whisker will be working (no steam function). Approximate time for cold frothing is 45 sec.

4. **Preparing Cappuccino:** Froth the milk as described in previous 3 steps. Prepare an Espresso in a Cappuccino cup and then pour the frothed milk on top of the Espresso.

5. **Preparing Latte Macchiato:** Froth the milk as described in previous 3 steps. When the frothing process stops, pour the frothed milk into a latte glass. Place the glass under the coffee spout and prepare an Espresso.

EN

1. **Turn the machine off, unplug the cord and let the machine cool down.** Wipe all outer surfaces with a damp cloth. Rinse the water tank once a day.

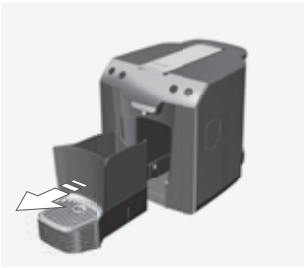

2. **When the floating indicator** is visible above the grid, the drip tray must be emptied. Lift out grid, tray and waste container. Empty, rinse, dry and put back in place. This procedure should be carried out every two or three days or after 10 brewed coffees. Drip tray is not dishwasher proof (paint can be damaged).

3. **The milk frother glass,** lid, whisker and steam spout can be washed in dishwasher. ⚠ **The motor unit is not waterproof and cannot be immersed into the water.** Please use the soft damp cloth for cleaning.

1. **Decalcifying.** We recommend to decalcify the machine regularly depending on the water hardness (2–3 months). We recommend to use Electrolux decalcifying solution EPD4/C/D/E/N/R (never use vinegar). Remove and empty the water tank. Fill the water tank with decalcifying solution (follow product instructions).

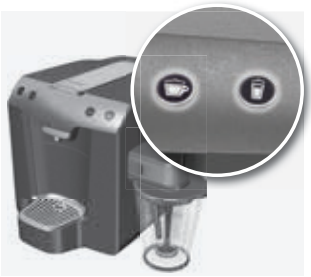

2. **Empty the milk frother glass and assemble it to the machine.** Press both the Cappuccino and Latte Macchiato button for more than 3 sec to start the descaling. (Cappuccino and Latte Macchiato button will flash alternately during the 30 minute decalcifying process).

3. **When the decalcifying process is finished,** run the coffee function without a capsule by pressing the Espresso Lungo button. Run also the Latte Macchiato function by pressing the Latte Macchiato button with water in the milk glass one time. Run through a half watertank.

EN

Problems	Causes	Solutions
The machine does not turn on.	The machine is not connected to the power source.	Connect the machine to the power source.
		Contact Electrolux customer service.
The pump is very noisy. Both indicator lights for small and big cups are flashing. No water flow.	No water in the tank.	Fill the tank with fresh drinking water. 1. Prime the water circuit. 2. Check correct water tank position.
The loading lever doesn't reach the brewing position.	Capsule inserted incorrectly.	Empty the used capsule compartment.
		Repeat the sequence, open and close the lever. If that is not enough remove the capsule manually from the compartment after unplugging the machine.
The coffee is cold.		Preheat the cup with the hot water.
The coffee is brewed too fast, the brewed coffee is not creamy.	Capsule already used.	Open the lever and insert a new capsule.
Coffee is not brewed or brewed in drips only from the spout and there is also a spillage from the back of the brewing spout.	Coffee spout is clogged.	Clean the coffee spout.
	Circuit is not primed	Prime the water circuit.
The milk does not froth.	Not suitable milk.	Use fresh, partially skimmed milk.
	The milk is too hot.	Use milk at refrigerator temperature.
	The whisking spiral is not in place.	Make sure that the whisking spiral is correctly assembled.
The frothed milk is too hot or cold.	The milk amount was not filled according to the Cappuccino and Latte Macchiato line.	Decrease or increase the milk amount.

Disposal

Packaging materials

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

Old appliance

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Thinking of you

Electrolux

EN Available accessory -
Premium Descaler

Share more of our thinking at
www.electrolux.com

3480 E ELM5400 02010612